

# ZOLAR® Blade 60C

1 inch thin LED Panel



ZOLAR®




## Quick User Guide

# LED Panel




Front

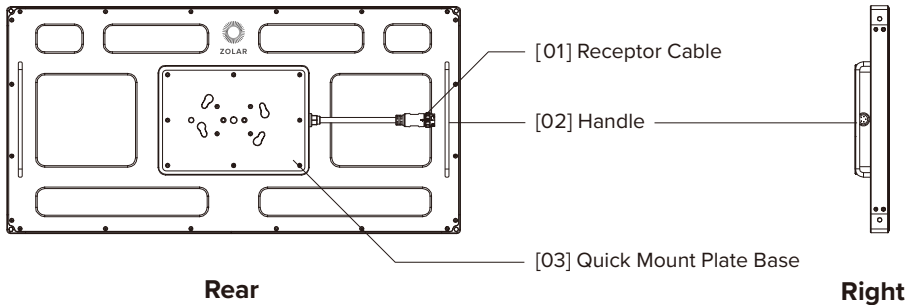

Rear


Right

# Controller Unit<sup>[04]</sup>

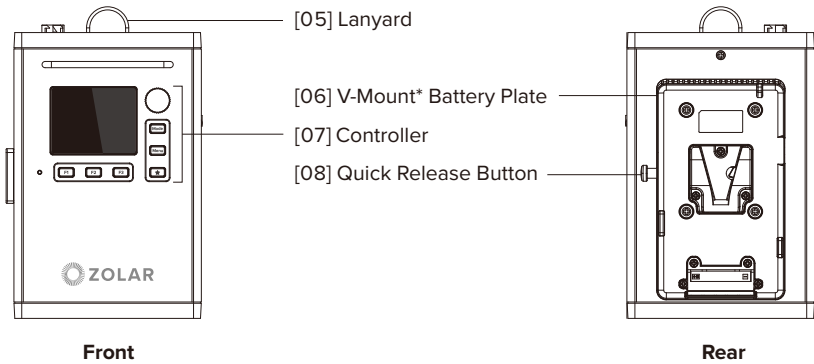

Front



Rear

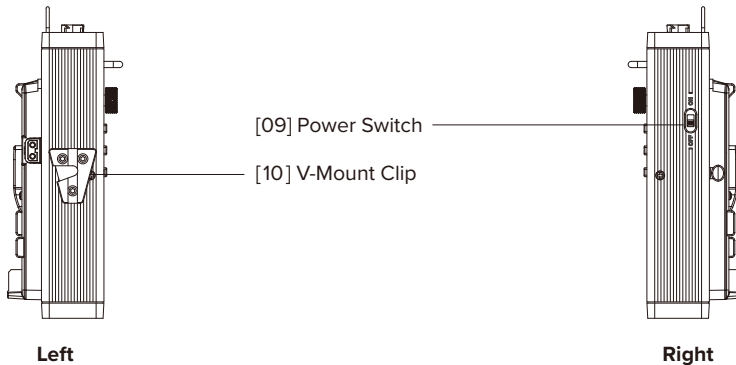


Left

Right


\*The Gold-mount Battery option to be followed.

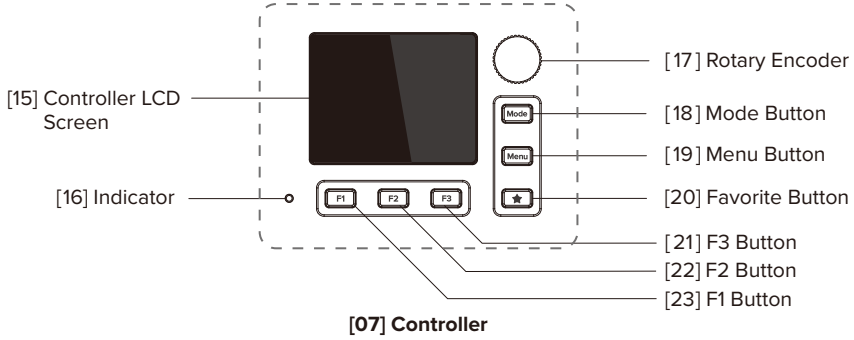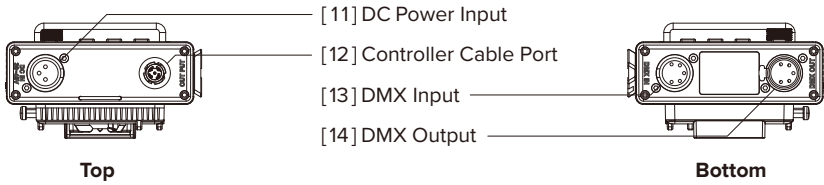


## Accessories included in Basic Kit

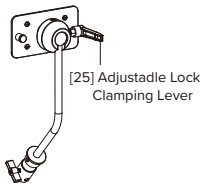

[24] ZOLAR® Goose-Neck Rear Mount Plate

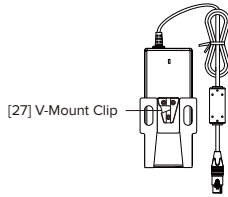


[26] AC DC Power Adapter 36V

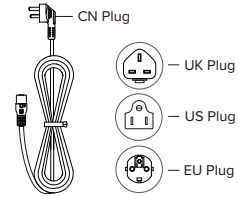


[28] AC Power Cable\* (CN)

\* Power plug varies according to socket types for each country.

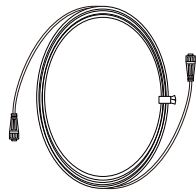


[29] ZOLAR® Controller Cable 8M

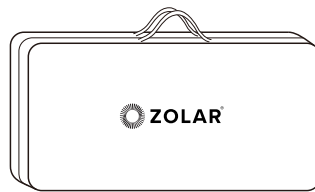


Carrying Case for ZOLAR® Blade 60C


## Optional Accessories

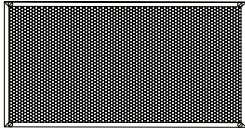


**ZOLAR® Honeycomb Grid  
30D 60x30**

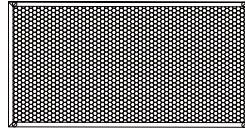


**ZOLAR® Honeycomb Grid  
60D 60x30**

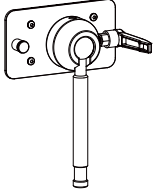


**ZOLAR® Rear Mount Plate  
with Baby Pin**

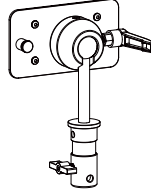


**ZOLAR® Rear Mount Plate  
with Junior Pin**

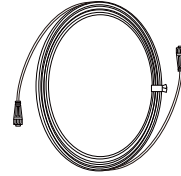

**ZOLAR® Controller Cable 16M**

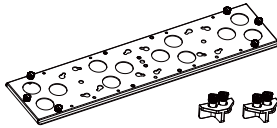

**ZOLAR® Blade 60C Mounting  
Accessory Kit**

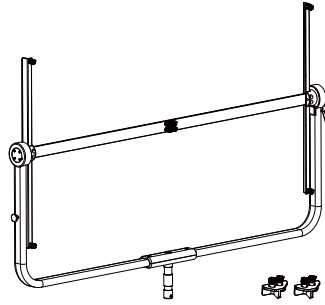

**Yoke for ZOLAR® Blade 60C 2x2**

## Preface

Please read this document carefully in order to understand the ZOLAR® Blade 60C (hereinafter collectively referred to as “this Product”) and use it reasonably. Refer to the official website ([www.z-cam.com/zolar](http://www.z-cam.com/zolar)) for the latest version of this document and updated product information.

Please contact Shenzhen ImagineVision Technology Limited (hereinafter referred to as “ImagineVision”) or its authorized distributors/resellers, in case of any product queries about installation or operation.

## Before You Begin

Please read and follow this Safety Guideline and all the terms associated to this Product carefully, to know your legal rights, responsibilities, and safety instructions, otherwise, it may result in product damages, safety accidents and personal injuries. By using this Product, you hereby signify that you have read, understood, acknowledged and accepted this Safety Guideline and all the terms and conditions associated with this Product, and assume responsibility for any behaviors or consequences. You undertake to use this Product on normal and reasonable purpose, and agree to this Guideline and all the terms and conditions associated with this Product, as added, reduced, amended, modified made by ImagineVision from time to time.

ImagineVision provides no expressed or implied guarantee in relation to this Product, assumes no loss or legal responsibility raised from misuse of this Product contrary to this Safety Guideline and the terms associated to this Product, accepts no indirect, consequent, punitive, occasional, special, criminal-punitive loss or legal responsibility. Under any circumstances, the total liability of ImagineVision shall NOT exceed the price paid by you to ImagineVision for the product.

## Safety Guidelines

This Product is not intended for use by persons under the age of 18. Keep out of reach of children.

1. Keep children away when operating the product.
2. Do not stare at the light source as it may cause permanent eye damage.
3. Wear gloves before touching heated surfaces of the product to prevent burns.
4. Wear gloves when touching sharp edges and corners of the product to prevent cuts.
5. Position the power cables so that it will not be tripped over, or accidentally pulled out causing the product to shut down.
6. If an extension power cable is required, the minimum amperage rating should not be less than that of the product's own power cable.
7. When using the device with AC DC Power Adapter, connect it to a grounded power outlet.
8. Do not place the product near any flammable and/or volatile liquid to prevent potential damages.
9. ZOLAR® Blade 60C is rated IP65. ZOLAR® Blade 60C must NOT be submerged in water.
10. If using the ZOLAR® Blade 60C near water or in the rain, it is recommended to use an earth leakage circuit breaker (RCD or GFI) to protect the user and the device.

## Installation

1. Install the ZOLAR® Goose-Neck Rear Mount Plate [24] onto the Quick Mount Plate Base [03] of the LED panel;
2. Mount the LED panel onto light stand through the ZOLAR® Goose-Neck Rear Mount Plate [24], tighten the light stand clamp until the LED panel is firmly secured;
3. Use the Adjustable Lock Clamping Lever [25] on the ZOLAR® Goose-Neck Rear Mount Plate [24] to adjust to desired position.

## Power Supply

### Using AC DC Power Adapter 36V

1. Connect ZOLAR® Controller Cable 8M [29] to Receptor Cable [01] of the LED panel;
2. Connect ZOLAR® Controller Cable 8M [29] to Controller Cable Port [12] of the Controller Unit [04];
3. Slide AC DC Power Adapter 36V [26] to the V-Mount Battery Plate [06] from the top, Push gently downwards until lock into position;
4. Connect output power plug of the AC DC Power Adapter 36V [26] to DC Power Input [11] of the Controller Unit [04];
5. Connect AC Power Cable [28] to AC DC Power Adapter 36V [26];
6. Connect AC power plug to AC power outlet (110~240V, 50/60Hz);
7. To disconnect, make sure the Power Switch [09] is in OFF position, unplug AC Power Cable [28] from power outlet, press and hold the safety lock of the AC DC Power Adapter 36V [26] to pull it out from the Controller Unit [04], rotate and hold the safety lock of ZOLAR® Controller Cable 8M [29] to pull it out from the Controller Unit [04], repeat at the other end to pull it out from the Controller Cable Port [01] of the LED panel.

### Using Battery\*

1. Slide the V-Mount battery to the V-Mount Battery Plate\*\* [06] from the top of the Controller Unit [04];
2. Push gently downwards until lock into position;
3. To unmount the battery, press and hold Quick Release Button [11], then lift the battery upward.

\* Only 14.4V~28.8V V-Mount batteries can be used. Not included in the standard package.

\*\*Controller Unit has V-mount and Gold-mount Battery options. The Gold-mount Battery option to be followed.

## Power On/Off

1. Verify power supply connection;
2. Turn Power Switch [09] to “I” position;
3. To power off, simply turn Power Switch [09] to “O” position;

## Menu Operation

1. Press Menu Button [19] on the Controller [07] to enter the menu;
2. Rotate Rotary Encoder [17] clockwise to move cursor downward, anti-clockwise to move cursor upward. Press to confirm selection. Press Menu Button [19] to return to the upper level menu.

## ■ Correlated Color Temperature Adjustment

1. Press Mode Button [18] on the Controller [07] during standby mode, rotate Rotary Encoder [17] to select CCT, press to enter CCT menu;
2. Press F1 Button [23] to enter CCT adjustment mode;
3. Rotate Rotary Encoder [17] clockwise to increase color temperature. Each click increases 50K, highest value is 20,000K;
4. Rotate Rotary Encoder [17] anti-clockwise to decrease color temperature. Each click decreases 50K, lowest value is 2,000K;
5. Press F1 Button [23] again to lock the current color temperature, and quit the CCT adjustment mode.

## ■ G/M Color Balance Adjustment

1. Press F2 Button [22] on the Controller [07] during standby mode to enter G/M adjustment menu;
2. Rotate Rotary Encoder [17] clockwise to increase green tones and decrease magenta tones. Each click increases 0.01, highest value is 1.00;
3. Rotate Rotary Encoder [17] anti-clockwise to decrease green tones and increase magenta tones. Each click decreases 0.01, lowest value is -1.00;
4. Press F2 Button [22] again to lock the current value, and quit the G/M adjustment mode.

## ■ Intensity Adjustment

1. Press F3 Button [21] on the Controller [07] during standby mode to enter intensity adjustment menu;
2. Rotate Rotary Encoder [17] clockwise to increase intensity. Each click increases 0.1%, highest value is 100%;
3. Rotate Rotary Encoder [17] anti-clockwise to decrease intensity. Each click decreases 0.1%, lowest value is 0%;
4. Press F3 Button [21] again to lock the current intensity, and quit the intensity adjustment mode.

## ■ HSI Mode

1. Press Mode Button [18] to enter Mode menu;
2. Rotate Rotary Encoder [17] to choose HSI mode and press to confirm selection;
3. Press F1 Button [23] to enter Hue adjustment menu, rotate Rotary Encoder [17] to adjust Hue value (range 1° ~ 360°);
4. Press F2 Button [22] to enter Saturation adjustment menu, rotate Rotary Encoder [17] to adjust Saturation value (range 1% ~ 100%);
5. Press F3 Button [21] to enter Intensity adjustment menu, rotate Rotary Encoder [17] to adjust Intensity value (range 1.0% ~ 100.0%).

## Indicator<sup>[16]</sup> Status

Status	Always On	Flashing (0.5s interval)
Red	Error	-
Green	Normal	-
Blue	Art-Net / sACN in use	-
Yellow	Warning: Voltage / Temperature	Firmware upgrade in progress
Magenta	ZolarLink: Master Unit connected	ZolarLink: Master Unit disconnected
Cyan	ZolarLink: Slave Unit connected	ZolarLink: Slave Unit disconnected
White	DMX Input / Output	-

## ZOLAR® Mobile App

Scan the corresponding QR code below to download and install ZOLAR® Mobile app, then use Bluetooth or Wi-Fi to connect and control the LED panel.



App Store (iOS)



Google Play (Android)

Visit <http://www.z-cam.com/zolar> for the ZOLAR® App download link and more product information.



## ■ Warranty Policy

### ○ Warranty Scope

Warranty Service covers defects in material and workmanship of ZOLAR® Blade 60C product and its accessories and annexes contained therein (hereinafter collectively referred to as “this Product”).

### ○ Warranty Period

Warranty Period is 12 months from the date of original purchase. Warranty period will start 90 days from date of shipment according to internal record of Shenzhen ImagineVision Technology Limited (hereinafter referred to as "ImagineVision"), whichever is later, in case of failure to provide valid purchase invoice or other valid proof showing date of original purchase.

Serviced or replacement product will continue to be covered under the original warranty period of the product.

### ○ Warranty Arrangement

In case the product is found defective either due to material or workmanship issues by ImagineVision or its designated/approved service partners within the warranty period, ImagineVision or its designated/approved service partners will carry out repair service or product replacement at no cost. Note that all costs and risks associated with the transportation and delivery of the defective product to ImagineVision or its designated/approved service partners shall be borne by the customer.

#### **Limited Warranty**

- This warranty is non-transferable and non-assignable, and only applicable to the original purchase customer.
- This warranty does not cover any misused, abused, accidentally or intentionally damaged, altered/deleted serial number product.
- This warranty does not cover repaired or replacement products serviced by non ImagineVision authorized service center or personnel.

## ■ Disclaimer

All product features and technical specifications stated are subject to the sole interpretation and explanation of Shenzhen ImagineVision Technology Limited, and subject to change without notice.

## ■ FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

## ■ RF Warning Statement

This device has been evaluated to meet general RF exposure requirements.

## ■ Transmission

Setting transmission frequency on the ZOLAR® Blade 60C is made from 2400 to 2483.5MHz and rated output power is less than 100 mW. Hereby, Shenzhen ImagineVision Technology Limited, declares ZOLAR® Blade 60C is compliance with the essential requirement and other relevant provisions of Directive 2014/53/EU. The EU declaration conformity can be obtained through your local distributor. Please refer to address in packing.

It is available at following internet address: [www.z-cam.com/zolar](http://www.z-cam.com/zolar).

### ⚠ Caution

1. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
2. The luminaire is intended for professional use only.

